

ULTIMATE MOVER

FG-1000

Instruction and Safety Information



BASIC SPECIFICATIONS:

Dry weight of the machine: 900 lbs.

Load carrying capacity: 800 lbs.

88 Signet Drive
Weston, ON M9L 1T3
Tel: (416)-744-2050
Fax: (416)-744-4247

- Pickering, ON
- Toronto (Bloor St.), ON
- Toronto (Wade Ave.), ON
- Weston (Weston Rd.), ON
- Weston (Signet Dr.), ON
- Barrie, ON
- Oakville, ON
- Hamilton, ON
- London, ON
- Edmonton, AB
- Calgary, AB
- Winnipeg, MB

WARNING

Misuse of this equipment may result in damage or injury. It is the responsibility of the purchaser to ensure that the personnel operating the machine are trained in the proper operating procedures and all safety regulations.

The employer shall permit only those employees qualified by training or experience to operate equipment and machinery.

The employer shall instruct each employee in the recognition and avoidance of unsafe conditions and the regulations applicable to the work environment, to control or eliminate any hazards or other exposure to illness or injury.

Regulations governing the use, selection and maintenance of personal protective and lifesaving equipment as stated in safety regulations shall be followed.

Do not operate on a roof without a perimeter warning system or barrier.

SAFETY PRECAUTIONS

1. When using this equipment safety shoes full-faced shield and proper clothing should be worn to protect the operator from flying debris.
2. Do not operate this equipment within 10 feet of the roof edge.
3. When on-deck equipment is being used, perimeter warning lines must be set feet from the roof edge and around all roof openings.
4. Follow local code requirements.
5. Never leave the machine unattended when the engine is running.
6. Shut off the engine before refueling% checking, adjusting or repairing.
7. Always keep your hands and feet clear of moving parts.
8. Do not operate unless all safety covers and guards are in position.

OPERATOR TRAINING

1. Before being allowed to use this or any piece of equipment, the operator should first fully understand all proper operating procedures. Special attention should be paid to the control locations and functions, all warning messages, and possible hazardous operations conditions.
2. Before using the machine on a roof, the operator should become familiar with the controls, safety features, and the overall 'feel' of the machine, on the ground, preferably in an open area with no vehicle or pedestrian traffic.
3. Proper training includes informing the operator as to the correct protective clothing and safety equipment that should be worn while operating the equipment. Clothes that fit properly (that is, not too tight and not too loose) include a long sleeve shirt buttoned at the cuff, long cuffless pants, steel toe safety shoes and safety glasses or full-faced shield. These items should be mandatory apparel for the operator. If work is being done at a level lower than the level at which the sweeper is being used, a hard hat must be worn.

INTENDED USE

This machine is intended to be used for the sole purpose of moving a Gravel bucket, Dumper Tray, 55 Gallons insulated tank, TPO Rolls and 4' x 8' ISO on a flat roof. It is not designed for moving people.

BEFORE STARTING

Warning Make certain that all the safety covers are in place and all bolts and nuts are tightened securely. Never under any circumstances do operate, without all the safety covers bolted firmly in place.

Never put hands, feet or any parts of body close to the rotating parts when engine is running.

Never leave the machine unattended when the engine is running.

Note: Make certain that the engine crankcase is filled with oil and that the engine has been serviced as per the engine instructions.

Make sure that the hydraulic tank has enough fluid.

⚠ Warning: Make certain that all the safety covers are in place and all bolts and nuts are tightened securely. Never under any circumstances, operate without all the safety covers bolted firmly in place.

Never put hands, feet or any parts of body close to the rotating parts when engine is running.

Never leave the machine unattended when the engine is running.

Note: Make certain that the engine crankcase is filled with oil and that the engine has been serviced as per the engine instructions.

Make sure that the hydraulic tank has enough fluid.

UP-DOWN CONTROL LEVER

DIRECTION CONTROL HANDLE



OPERATION ONLY WITH POWER

Note: The Ultimate Mover can move forward and reverse only with power, it will not move and lock in position without power.

Start the engine as per the engine operation instruction. When engine runs smoothly, turn the throttle lever to a higher engine speed.

To move forward:

Pull the F side of the Direction control handle fully towards the operator. The brake will release automatically, and the Ultimate Mover will start moving forward.

To turn while Mover is moving:

Pull on the handrail to the direction of turn and push with the other hand on the other side of handrail while pulling the directional control hand.

To stop the Ultimate Mover:

Release the direction control handle. The brake will engage and stop the Mover.

To move reverse:

Pull the R side of the Direction control handle fully towards the operator and the Mover will start to move reverse.

To change the speed:

Turn the throttle lever clockwise to increase the speed.

Turn the throttle lever counterclockwise to decrease the speed.

To lift the Load:

Pull the load control lever towards the operator.

To lower the load:

Push the load control lever away from the operator.

To lock the load:

Let go the load control handle, the handle spring back to the middle and lock the load.

GRAVEL BUCKET HANDLE

REAR LOCK HANDLE



MAINTENANCE

Clean and grease when needed.

For engine maintenance, carefully follow the engine maintenance instructions that are provided with this machine.

Note:

Remove spark plug wire from spark plug to avoid engine start-up accidentally before servicing the Ultimate Mover or the engine

